



Reassemble

Step 9
Install new Cylinder and Cylinder Housing by using reverse steps 4 thru 7.

Step 10
Reinstall Handle by using reverse steps 1 thru 3.