


Installing Interior Ramps for NSF Floors

1. Lay a bead of grey silicone (016791) under area where the foam insert will be located. Set thick end of foam insert into ramp cutout recess (approximately 1½" past metal edge).
2. Lay a bead of grey silicone (016791) approximately 5/8" from the edge of the ramp cutout as shown below. Also apply grey silicone on top of foam insert where the ramp will be installed. Place ramp into position, securing it firmly with the #12-24 screws (016429). Remove any excess silicone along the ramp, making sure all the voids are filled between the ramp and floor panel.
3. After interior ramp is secured, clean the surface and apply 3, 4"x24" safety walk strips (017587) approximately as shown.

See sheet 2 for door installation.

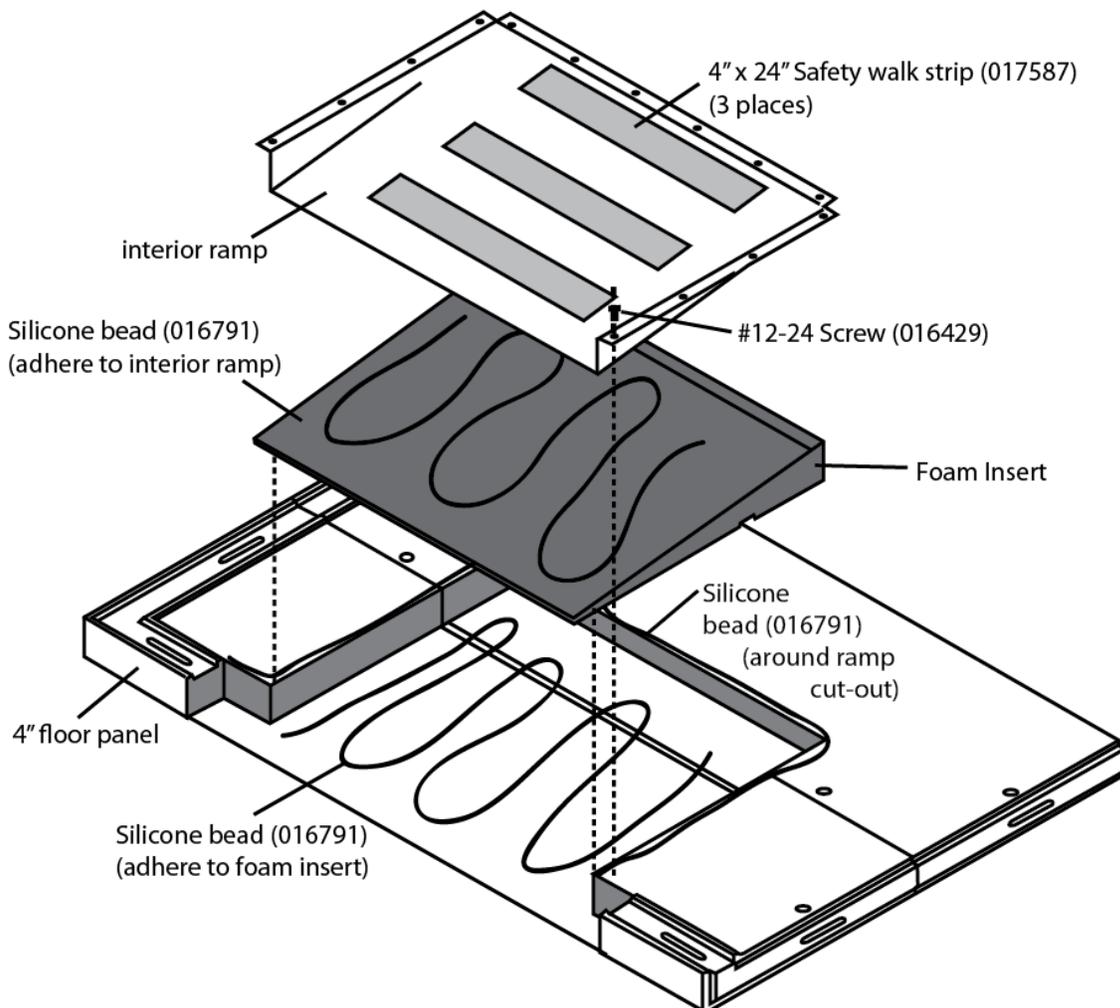

INSTRUCTION MANUAL
NSF Floor Interior Ramps
IM-187-80

4. Lay a bead of grey silicone (016791) 5/8" thick at the front edge of the ramp and at the front, bottom edge of the step plate. Locate the door panel in the notch provided in the floor panels. Install both wall panels on either side of door frame.
5. Push the door frame along the bottom edge until the frame is flush with the floor sides. Using the step plate as a template, drill 11/64" dia. holes in the ramp. Secure the step plate to the ramp using the #12-24 self-tapping screws (016429).
6. Remove all excess silicone along the step plate at the ramp and along floor edge, making sure all voids are sealed.

