




### Installation Instructions for Stucco Aluminum Drip Edge for a non-Bally Roof

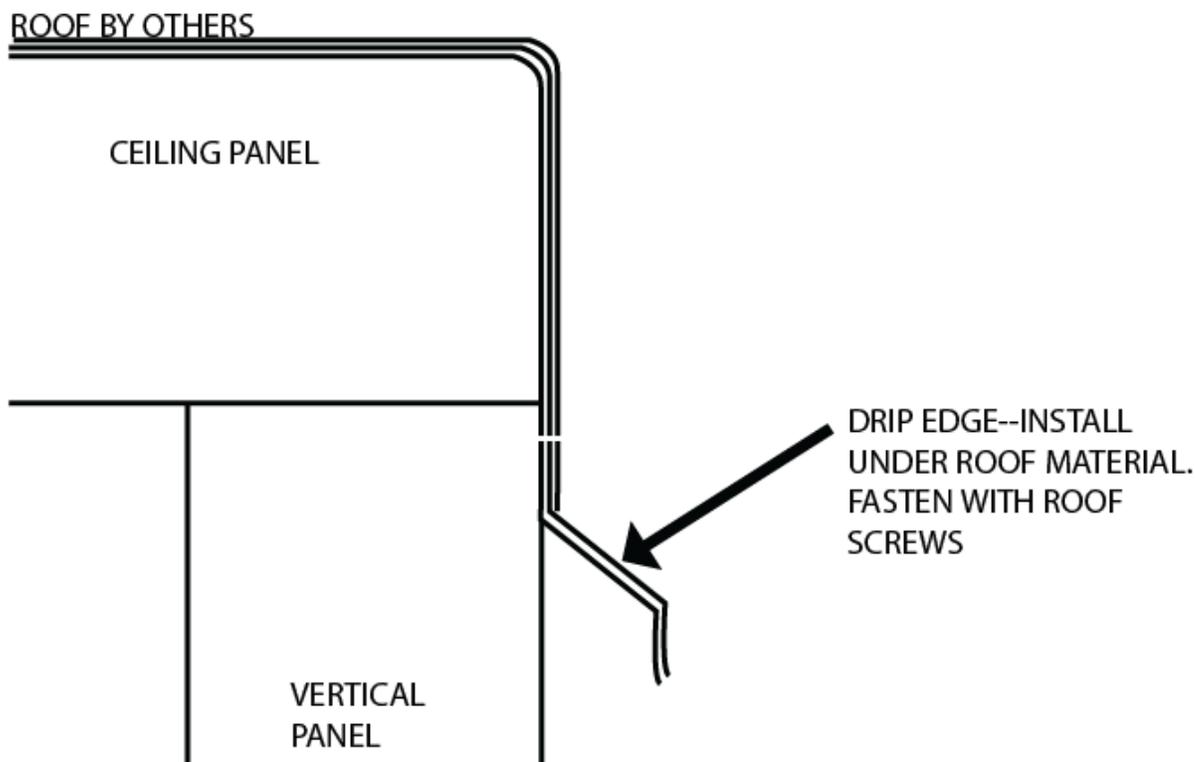

NOTE: INSTALL CORNER PIECES. THEN STRAIGHT RUNS. OVER FELT PAPER BEFORE INSTALLING WEATHER ROOF. DRIP EDGE PIECES. CAN OVERLAP CORNER PIECES AND EACH OTHER BY 1½" MAXIMUM. SOME TRIMMING BY INSTALLER MAY BE REQUIRED.

SECTION VIEW