




Installation Instructions for Drip Edge for a Bally Membrane Roof

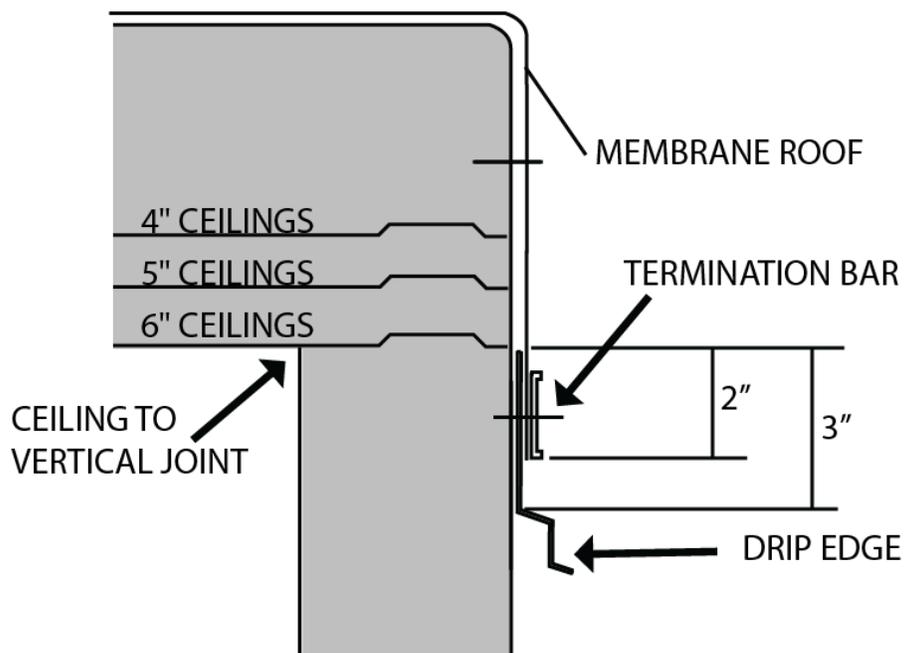

NOTE: THE DRIP EDGE SHOULD BE INSTALLED BEFORE ATTACHING THE DOWNWARD EDGE OF THE MEMBRANE ROOF. ALIGN THE TOP OF THE DRIP EDGE WITH THE CEILING TO VERTICAL JOINT. ATTACH DRIP EDGE AT TWO OR THREE LOCATIONS TO TEMPORARILY HOLD IT IN PLACE. NOW COMPLETE INSTALLATION OF MEMBRANE ROOF.