
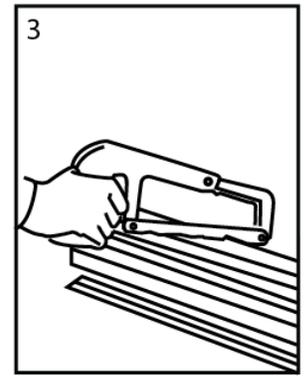
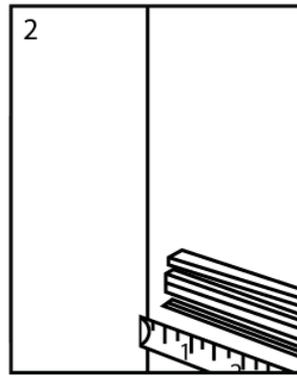


## Installation Instructions for the Boston Rub Rail




Tools: tape measure, hacksaw, power mitre saw or racac arm saw, drill, 1/8" drill bit, 3/32" drill bit, #8 panhead screws, screwdriver, sand mallet, safety goggles, utility knife

Set uncoiled vinyl at room temperature 24 hours before installation.  
Lubricate inside of vinyl with soapy water or silicone spray before installing.

1. Using cart, carriage, or other moving equipment, determine point of impact. Set bumper height accordingly.
2. Taking length of end or corner cap into account, determine proper length of channel. Allow 3/8" for end and corner.
3. Cut channel to desired length with saw. Cut length will be 3/4" less than length of fixture.



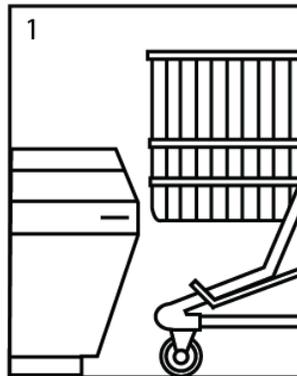


4. Allowing space for end caps, drill screw holes through channel and fixture or wall 12" to 18" apart. Mount channel with #8 panhead screws. Located first and last screw 3" from end.

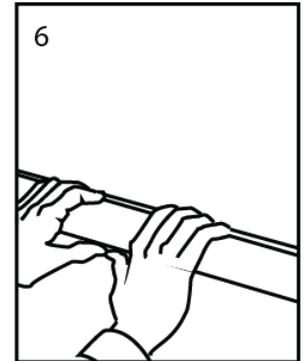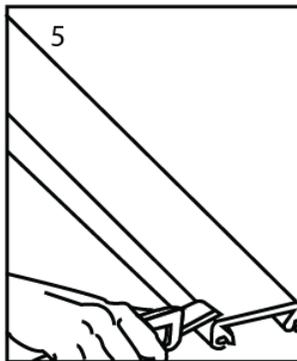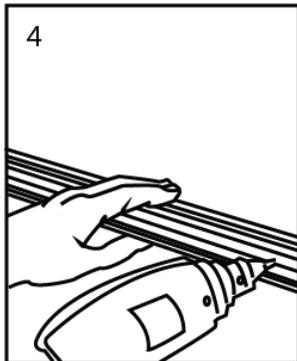

5. Determine length of vinyl. Cut vinyl 3" less than total length of fixture.

6. Position vinyl 1 1/2" from end of fixture. Position top leg of vinyl insert into groove of aluminum channel. Position bottom leg of vinyl insert into other groove.

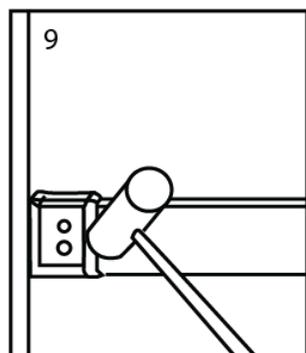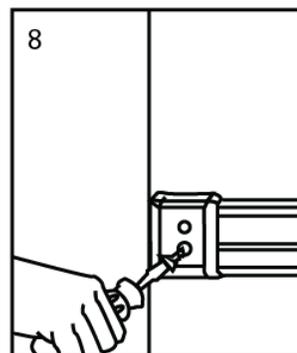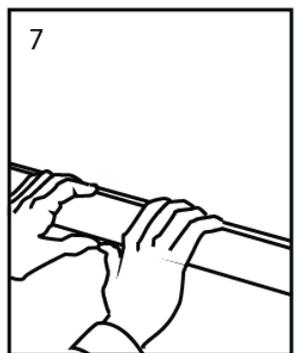

7. Squeeze vinyl legs into channel until flush with fixture or wall.
8. Cut plug from end/corner with knife, slide over channel and vinyl. Drill hole for end cap into channel. Hand screw with #8 panhead screws 3/4 of the way down.

9. Hammer end/corner cap on edge to seat teeth into vinyl. Tighten screws. Insert plugs to conceal screws.