



INSTRUCTION MANUAL
Condensing Unit Stand
IM-204-23

Assembly Instructions for Bally Condensing Unit Stand DR-200-4 / DR-600-4



CONDENSING UNIT STAND BACKGROUND

Bally Condensing Unit Stands are designed to maximize floor space, improve technician ergonomics, and also reduce the risk of unit damage due to the environment. There are two models of Bally Condensing Unit Stand available, the DR-200-4 and the DR-600-4. Both models of Bally Condensing Unit Stands have 2 levels. The DR-200-4 is capable of hold one Chassis 1 condensing unit or one Chassis 2 condensing unit per level. The DR-600-4 is capable of holding 1 or 2 Chassis 1 condensing units, one Chassis 2 condensing unit, or one Chassis 3 condensing unit per level. Each can be surface mounted and will come disassembled.

INSTALLATION INSTRUCTIONS FOR THE DR-200-4 / DR-600-4

Step 1

To assemble the top and bottom horizontal frame elements, lap piece B's (004642 / 004644) over top of pieces A's (004641 / 004643) and secure with eight 3/8" dia. x 3/4" (016479) hex bolts, lock washers (016530) and nuts (016510) per level.

Step 2

Position legs, pieces C (004640 / 004645) against the outside corners of the top and bottom horizontal frame elements and secure each leg to the frame elements with eight 3/8" dia. x 3/4" hex bolts (016479), lock washers (016530) and nuts (016510). Anchoring tabs can be oriented in multiple directions and will affect the overall dimension.

See Figures 1 & 2 for building clarification.

Fig. 1





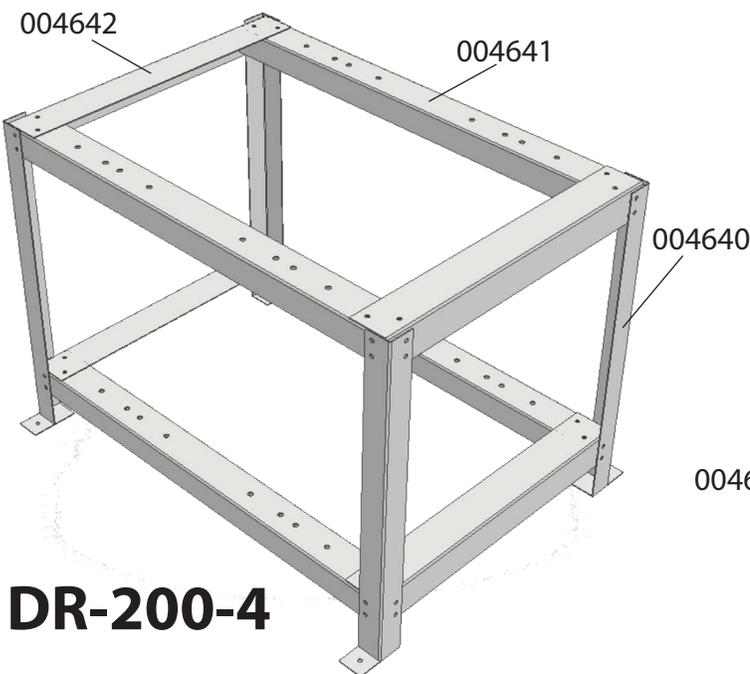


Fig. 2

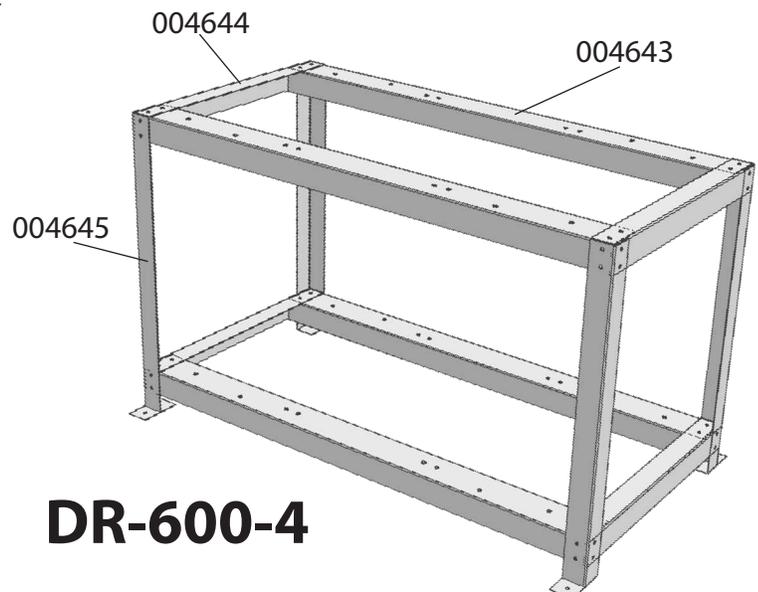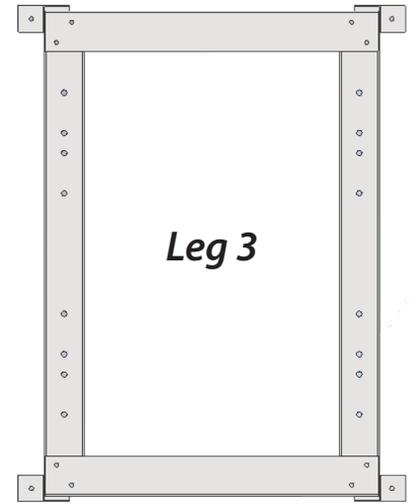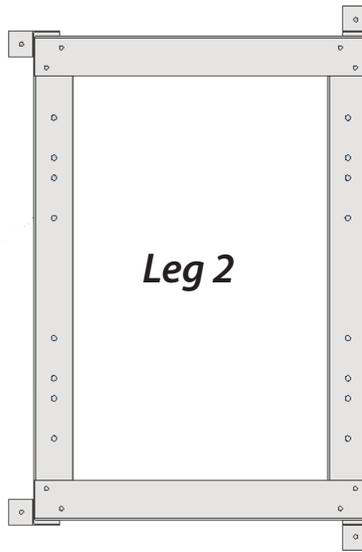

See Figures 3 for leg orientation.

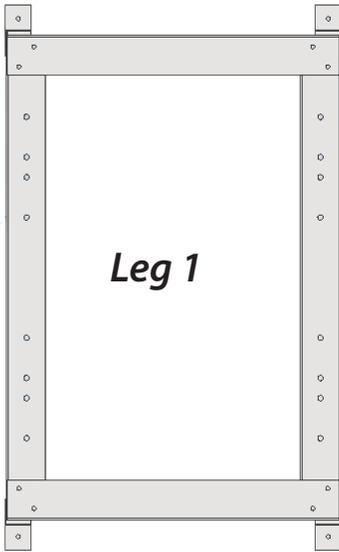

See Table 1 for overall dimensions.

Table 1

Overall Dimensions (Inches)				
Leg Orientation	Unit	Length	Width	Height
1	DR-200-4	53.75	33.5	35
2	DR-200-4	53.75	36.125	35
3	DR-200-4	48.5	38.75	35
1	DR-600-4	75.25	35.25	42
2	DR-600-4	75.25	37.875	42
3	DR-600-4	70	40.5	42

INSTALLING CONDENSING UNITS ON THE DR-200-4 / DR-600-4

Hint


- Secure Condensing Unit Stand to final location prior to the installation of condensing units.
- Mount Lower-Level Condensing Units first to aid with install.

Step 1


Place the Condensing Unit on the Condensing Unit Stand and secure using 3/8" dia. x 3/4" hex bolts (016479) with nuts (016510) flat washer (016521), and lock washers (016530). See Mounting Configuration for clarification.

MOUNTING CONFIGURATIONS


(Chasis 1, 2 & 3 Mounting)

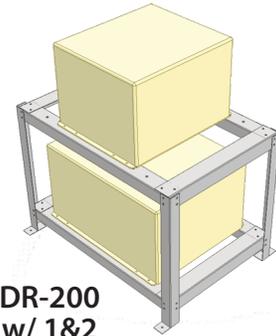


DR-200
w/ 1&2

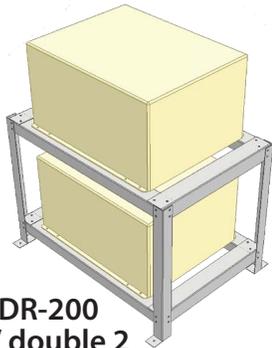


DR-200
w/ double 2

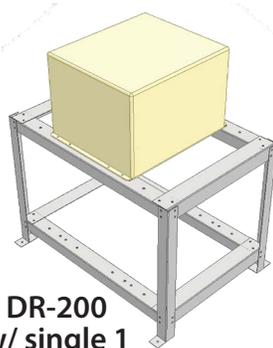


DR-200
w/ single 1

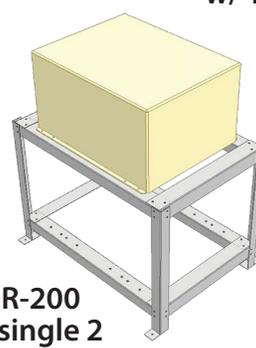


DR-200
w/ single 2

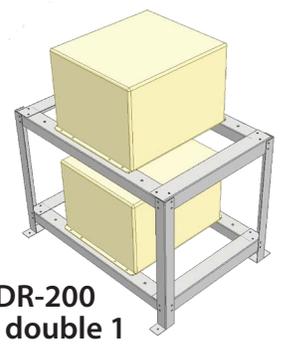


DR-200
w/ double 1

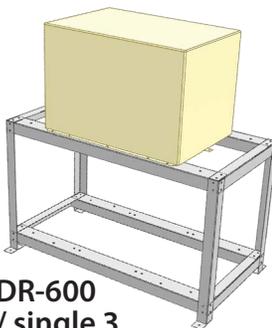


DR-600
w/ single 3

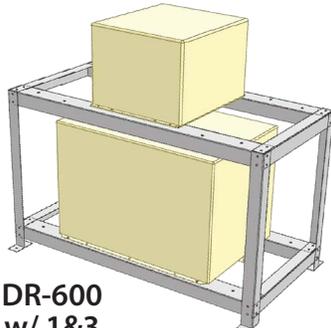


DR-600
w/ 1&3

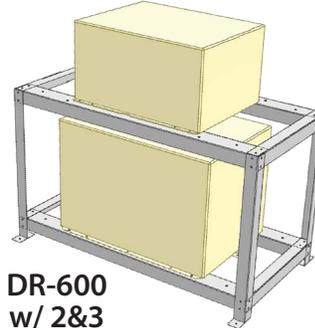


DR-600
w/ 2&3

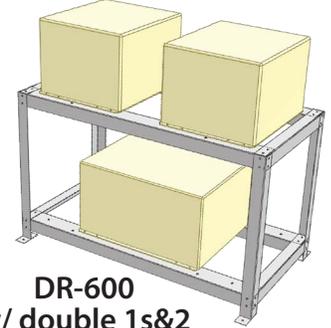


DR-600
w/ double 1s&2

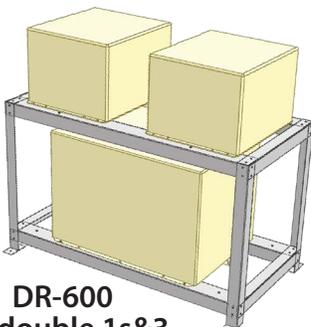


DR-600
w/ double 1s&3

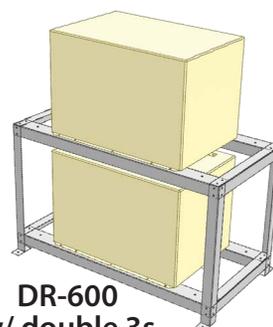

DR-600
w/ double 3s

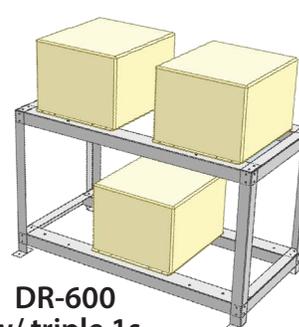

DR-600
w/ triple 1s

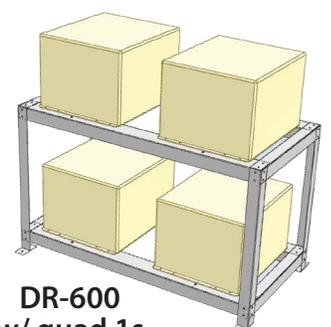

DR-600
w/ quad 1s